


# How To Reset Your Wireless Router Motorola 2247

**Warning:** If you reset your wireless router it will restore all settings, including your SSID and network password, to the default factory settings. After resetting your router, you will need to reconfigure your security settings.

1. Push down the reset button for 3 seconds
2. Wait until all lights restore to their normal configuration  
(Power, Wireless, DSL and Internet lights should be green)

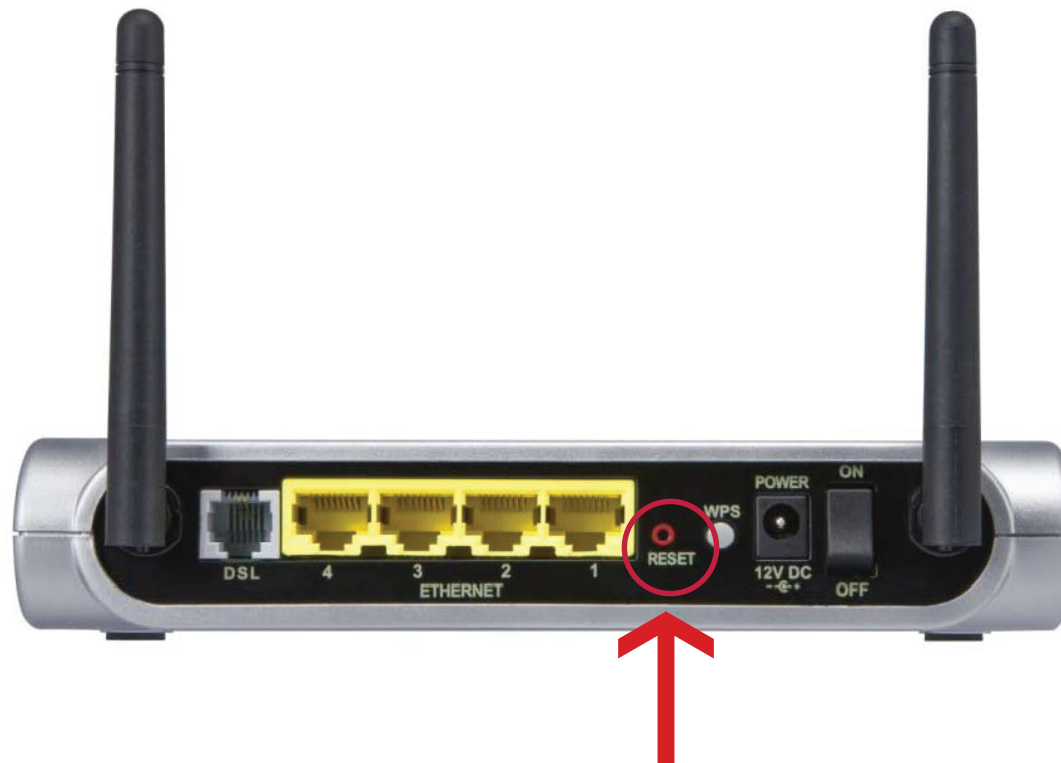

Reset button